



Getting Started Guide

PASSPORT echo™

Version 2.7



Aptiv Digital, Inc.

Passport Echo™ 2.7 — Echo2.7 Getting Started 1.0.

© 2005 Aptiv Digital, Inc., formerly Pioneer Digital Technologies, Inc. All rights reserved.

This document, as well as the software described in it, is furnished under license and may only be used or copied in accordance with the terms of such license. The information in this document is provided for informational use only and is subject to change without notice. Aptiv Digital, Inc. assumes no responsibility or liability for any errors or inaccuracies that may appear in this document or for any omissions. Except as may be permitted by such license, no part of this publication may be reproduced, stored in a retrieval system, transmitted, adapted, or translated in any form or by any means without prior written authorization of Aptiv Digital, Inc.

This product is protected under US Patent #6,400,379, #D481,736 & D476,015.

Trademarks

Aptiv™ and the Aptiv logo are trademarks of Aptiv Digital, Inc. and PDT Interactive is an authorized licensee of Aptiv Digital, Inc. Passport™, Passport DCT™, and Passport Echo™ are trademarks of Aptiv Digital, Inc. QuickInfo™ is a trademark and Webnostics® is a registered trademark of Aptiv Digital, Inc. All other product names mentioned in this document are trademarks of their respective owners.

Aptiv Digital, Inc.
2210 W. Olive Avenue, 2nd floor
Burbank, CA 91506

Table of Contents

<i>Watching Live TV</i>	4
<i>Finding TV Shows</i>	5
<i>Saving TV Shows</i>	6
<i>Viewing Saved Shows</i>	7
<i>Managing Saved Shows</i>	8
<i>Managing Your Upcoming Recordings</i>	9
<i>Managing Your Series Recordings</i>	10
<i>Video Output Formats</i>	11

Watching Live TV

With Passport Echo™, why just watch TV shows when you can control them with your remote!



Pause a show

Press .

Resume playback from pause

Press  OR .

Rewind a show

Press ; press again to change speed.

Skip backward

Press , then press .

Fast forward

Press ; press again to change speed.


Skip forward

Press , then press .

Advance one frame

Press , then press .

Watch video in slow motion

Press  twice quickly (within 1/2 second).

Resume playback from rewind, fast forward, or slow motion

Press .

See an instant replay

Press .

Return to “live” TV

Press .

Finding TV Shows

Finding TV shows is easy with the Program Guide. Browse for shows sorted by Time or Theme, or Search for shows by title or keyword.

▶ Browse the channel line-up



Press **GUIDE** while watching a TV show to access the Program Guide.


Browse for shows by Time/Channel

On entry, the channel line-up is sorted by time/channel. Press **◀**, **▶**, **▲**, or **▼** to browse shows. Highlight a show and press **SELECT** for options, or **RECORD** to record.




Browse for shows by Theme

While viewing the Guide, press **B** to browse by theme. Press **▲** or **▼** to highlight a theme, then press **SELECT** to browse related shows. Highlight a show and press **SELECT** for options, or **RECORD** to record.

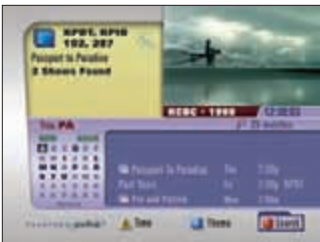

Search for shows by Title or Keyword

While viewing the Guide, press **C** to Search (press **C** again to choose Title or Keyword Search). Enter a title or keyword with the on-screen keyboard; use the arrow keys to highlight letters and press **SELECT** to enter. Move the highlight to the Search Results List by pressing **▶**.

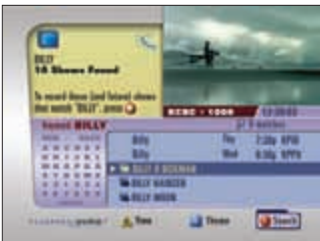

Highlight a show and press **SELECT** for options, or **RECORD** to record. Related shows are grouped under headers. Highlight a header and press **SELECT** to view individual listings, or **RECORD** to create a Series Recording.

Note: Pressing **RECORD** on a Keyword Header creates a *Keyword Series Recording* – future guide data will be continuously searched for matching shows to record.

Saving TV Shows

Shows can be saved using the Program Guide, by setting up a manual recording, or by pressing the RECORD key while watching a TV show.

▶ Scheduling Recordings while viewing the Program Guide



Go to the Program Guide by pressing **GUIDE**.


Schedule a single instance recording

Highlight a show and press **RECORD**, then select "Record this show" from the dialog box.

Schedule a Series Recording

Highlight a show and press **RECORD**, then select "Record entire series" from the dialog box; customize your Series Recording settings using the recording options provided, then press **A**.

▶ Saving the show you are watching

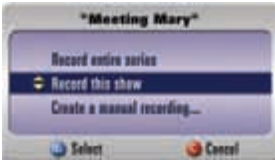

Press **RECORD** while watching a TV show to access the Recording dialog box.

Record the current TV show

Select "Record this show" from the dialog box.

▶ Creating a manual recording



While watching TV, go to the Manual Record dialog box by pressing **RECORD**, then selecting "Create a manual recording..." from the dialog box.
OR

While viewing the Saved Shows or Scheduled Recording Displays, press **RECORD**.

Schedule a single or recurring recording

Highlight each column and enter your recording settings, then press **A**.

Viewing Saved Shows

Shows that have been saved can be accessed at any time from the Saved Shows Display. Note: In order to access Passport Echo's DVR menus, you must have a remote control with a DVR List button.

▶ Access Your Saved Shows




To view a saved show, access the Saved Shows Display by pressing **LIST**.

Find a saved show Press **▲** OR **▼** to highlight a show. (Shows that have not been played are listed in bold text)

Play the highlighted show Press **▶**, OR press **SELECT** and select "Play", "Play from Beginning" or "Resume Playback" from the dialog box.

▶ Control Playback of a Saved Show

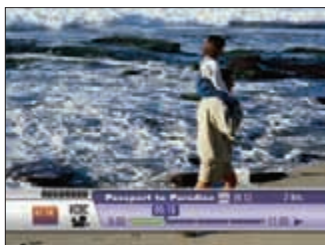

Pause a show Press **⏸**.

Resume playback from pause Press **▶** OR **⏸**.

Rewind a show Press **⏮**; press again to change speed.

Skip backward Press **⏮**, then press **◀**.

Fast forward Press **⏭**; press again to change speed.

Skip forward Press **⏭**, then press **▶**.

Advance one frame Press **⏸**, then press **▶**.

Watch video in slow motion Press **▶** twice quickly (within 1/2 second).

Resume playback from REW or FF Press **▶**.

See an instant replay Press **↺**.

Return to "live" TV Press **LIVE**, OR press **□** and then press **▲** (Stop and erase) or **■** (Stop and save) from the dialog box.

Erase a show Press **□**, then press **▲** (Stop and erase) from the dialog box.

Managing Saved Shows

Saved shows can be automatically erased as space is needed for new recordings, or saved until you erase them manually. Use the Saved Shows Display to manage your library of saved shows.

▶ Manage a Saved Show



Go to the Saved Shows Display by pressing **LIST**.

Find a saved show Press **▲** OR **▼** to highlight a show.

Erase a show Highlight a show and press **SELECT**; Select “Erase” from the dialog box.

Save a show until manually erased Highlight a show and press **SELECT**; Select “Save until manually erased” from the dialog box.

TIP! While viewing the Saved Shows menu, press **▲** to sort your list by Group Titles (arranged alphabetically) or Show All Listings (arranged by estimated erasure date).

Allow a show to be erased automatically Highlight a show and press **SELECT**; Select “Save until space is needed” from the dialog box.


Keep a show longer Highlight a show and press **SELECT**; Select “Keep Longer...” from the dialog box to go to the Prioritization display (see the following section).

▶ Keep a Saved Show Longer




Keep a show longer/ Erase a show sooner Press **▲** OR **▼** to increase or decrease the life span of the highlighted show; Press **SELECT** (Note: shows that are positioned lower on the list will be erased sooner than shows positioned higher on the list.)

Saved shows can be automatically erased to make room for new recordings, or saved until you erase them.

 – Indicates that a show will be saved until it is manually erased.

 – Indicates that a show is expected to be automatically erased soon.

 – Indicates that a show is expected to be automatically erased very soon.

Managing Your Upcoming Recordings

Your Scheduled Recordings list lets you see what upcoming shows are scheduled to be recorded, and also lets you cancel upcoming recordings.

Find and Modify an Upcoming Recording



Go to the Scheduled Recordings list by pressing **LIST**, then pressing **B**.

Find an upcoming scheduled recording

Press **▲** OR **▼** to highlight a scheduled recording.

Cancel an upcoming scheduled recording

Highlight a scheduled recording and press **SELECT**; Select “Cancel Recording” from the dialog box.

Modify an upcoming scheduled recording

Highlight a scheduled recording and press **SELECT**; Select “Record Options” from the dialog box to display the Record Options dialog box (see the following section).



Fine-tune an Upcoming Recording



Allow a show to be erased automatically

Scroll up or down to highlight the “Save:” option; scroll left or right to highlight the “Until space is needed” preference and press **A**.

Save a show until manually erased

Scroll up or down to highlight the “Save:” option; scroll left or right to highlight the “Until manually erased” preference and press **A**.

Adjust a scheduled recording's start time

Scroll up or down to highlight the “Start Time:” option; scroll left or right to adjust the recording's start time and press **A**.

Adjust a scheduled recording's end time

Scroll up or down to highlight the “End Time:” option; scroll left or right to adjust the recording's end time and press **A**.

Managing Your Series Recordings

Episodes of a series will not be saved if more than two scheduled recordings overlap. Use the Series Manager to determine how to resolve recording conflicts.

Find and Cancel a Series Recording



Go to the Series Manager by pressing **LIST**, then pressing **C**.

Find a Series Recording

Press **▲** OR **▼** to highlight a Series Recording.

Cancel a Series Recording

Press **SELECT**; Select “Cancel Series Recording” from the dialog box.



Change a Series Recording's Priority



Set a Series Recording's recording priority

Highlight a Series Recording and press **SELECT**; Select “Series Recording Priority...” from the dialog box and press **SELECT** to go to the Prioritization Display (shown at left).




Press **▲** OR **▼** to increase or decrease the selected Series Recording's priority; Press **SELECT** (Note: Series Recordings that are positioned higher on the list will be recorded in the event of a conflict with Series Recordings positioned lower on the list).

Video Output Formats


Use this preference to select an Output Format supported by your TV and to determine how to output non-conforming video.


Select a Video Output Format




Press  to access the General Settings menu; highlight the "Output Formats" preference and press . (If your service includes the QuickMenu™, press  twice to access General Settings menu.)

Select an Output Format and set Output Format Options

In the Settings column, highlight an Output Format that is supported by your television and press . Your selection will be bulleted and the Options column will become active.

Since programs can have a wide (16:9) or standard (4:3) aspect ratio that may not conform to your selected Output Format, you must choose how to output non-conforming video. Highlight an option and press .

Press  to accept your modifications, then follow the on-screen instructions to confirm your new settings.

PASSPORT   **echo**™