Guide To Your Remote

Individual select buttons for TV, DVD/VCR, Cable Box and Audio equipment

Use to access Video on Demand *

Displays list of recorded programs allowing you to select one for viewing *

Replay recent programming *

Mute television sound

Volume Up and Down

Display the help screen *

Move up or down a page through menu screens or program guide *

Exit from all applications

Used to view the channel guide *

Power On/Off for selected devices

Used with PVR type set top box. Allows you to rewind, play, fast forward VCR, DVD, VOD or DVR. Record to VCR or DVR; Pause and Stop VCR, DVD or VOD *

Return to live TV *

Used to select pre-programmed favorite channels *

Channel Up/Down

Return to last channel viewed

View channel program information *

Move up, down, left or right through any on line guide; Select the currently highlighted menu or channel selection by pressing OK *

Used to view the converter menu *

View the previous or next day's cable guide information*

Use for Picture-In-Picture compatible televisions

VIDEO-ON-DEMAND ACCESS

1. Tune to channel 450 or press the VOD button.
2. Select "OK" once channel 450 appears.
3. Allow VOD menu to load.
4. Follow on screen instructions to select movie or other program.

*** Requires a digital converter compatible with these operations**

Motorola DRC800 Remote

DiamondNet Customer Service
(918)775-4151

TROUBLESHOOTING

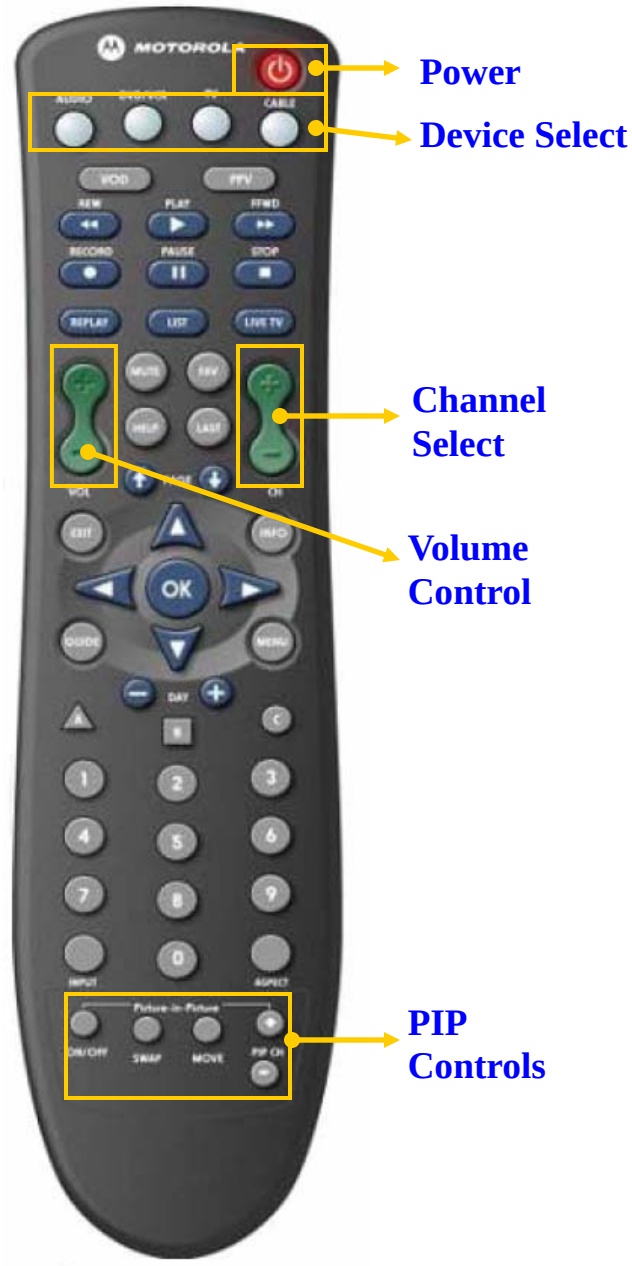

If you have trouble with your REMOTE:

- Press the function key (**Device Select**) for the device you are using (Audio, DVD/ VCR, TV or Cable/Receiver)
- Always point remote directly at the receiver when you are using it.
- Make sure batteries (2 "AAA") are good. When changing batteries, you have 10 minutes before your remote loses memory.

If you have trouble with your TV:

- Check all devices/cables to make sure each is properly connected and plugged in.
- Make sure your TV is tuned to the proper output channel (3 or 4). Channel 3 is the most common.
- Make sure when you change channels using the **channel select** button, the TV mode indicator light (**device select**) should glow.
- Remember the **volume control** will control both TV and digital receiver volume depending on which device is selected.

If you have trouble with your DIGITAL RECEIVER:

- Press the cable button (**device select**) and then press **power.**
- Check to see if the device cables are properly connected and plugged in.
- **Channel** and **volume** controls on the remote will control the digital receiver when the receiver is selected (**device select**).

HIGH DEFINITION channels only work with high definition capable digital receivers and TV's equipped with HDTV capabilities. If your TV does not support HDTV, you will not be able to view these channels.

PIP (Picture-In-Picture) controls only work with those TV's that are equipped with PIP capabilities.

Need to program devices into your new Motorola remote (Device Select): Refer to the user guide that came with your remote for procedures and codes to program televisions, VCRs or DVD players to operate with this remote.

DIAMONDNET
DiamondNet Customer Service
(918)775-4151

THE CITY OF SALLISAW OKLAHOMA